

4x in / 4x out

Relaismodul

Relais 1-4  
(Port 0-3)

J1 to GND

Input 1-4  
(Port 0-3)

Input 5-8  
(Port 4-7)

OUT2

or


OUT1

OUT1

Inputmodul

JP 1...4

Outputmodul

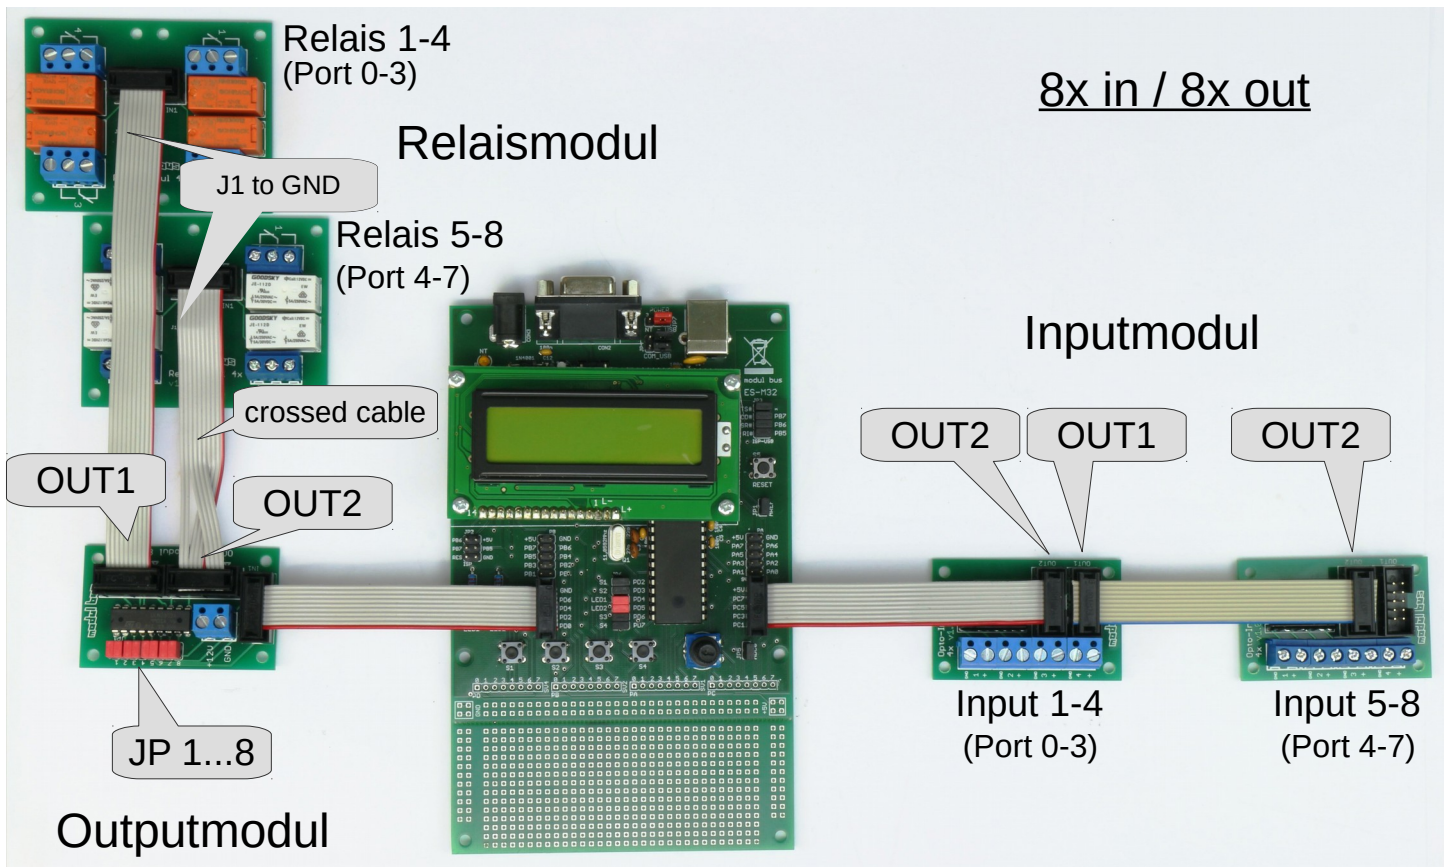

8x in / 8x out

Relaismodul

Relais 1-4  
(Port 0-3)

Relais 5-8  
(Port 4-7)

J1 to GND

crossed cable

Inputmodul

OUT2

OUT1

OUT2

OUT1

OUT2

Input 1-4  
(Port 0-3)

Input 5-8  
(Port 4-7)

JP 1...8

Outputmodul